

SELF-SCRAMBLE LOCK BOX

Resettable 4-Letter Combination

Opening Instructions:

- I. Slide the lever (located above the dials on the front of the lid) down to open the lid.
- II. Lift the lid from the security lock box to place or remove the keys inside the vault.

Please read all instructions thoroughly before resetting combination

Resetting Combination Instructions:

1. Your NuSet Self Scramble Lock Box is factory preset to _____ (Item # 2031S)
2. Open lid using the "Opening Instructions" Step I & II from above.
3. Lift the lid from the security lock box.
4. Slide the lever up again in the **closed position** and roll the dials back to the **last combination set**.
5. Insert the "Reset Key" (included) all the way into the side of the lid and make a 1/4 turn.
6. Once the key has been turned, roll the dials one at a time until the desired combination is aligned.
Tip : Write down the new combination to prevent loss of the new combination.
7. After the new combination resetted, return the key to upward position and remove it from the lid.
8. **Very Important!** Check combination before placing the lid to the lock box body. Return the lever to open/down position. If the lock retracts, the combination has been successfully changed.

Locking Instructions:


Return the lid on the security lock box after the resetting is completed.
Slide the lever on the front of the lid to closed/up position and the dials scramble themselves.

To Change Combination Again:

The last combination set must be in place before changing to a new combination. Repeat the resetting procedure beginning with Step 2.

Unlocking and Locking Shackle:

1. Key lock for the shackle is located inside the vault. Use the "Reset Key" provided to unlock the shackle.
2. **Important!** Press hard to ensure the shackle is completely locked.

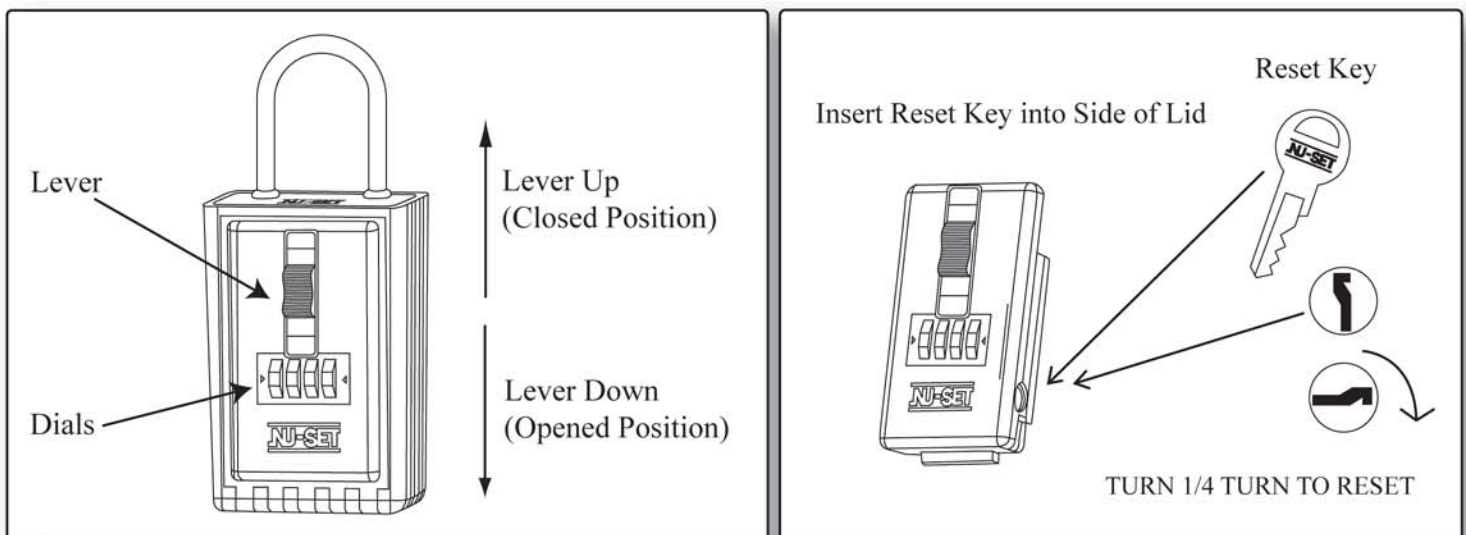

Limited Warranty: Warranted for 90 days against manufacturer defect. Warranty does not cover forgotten or incorrectly set combination or if the lid or shackle has been tampered with. For repair or replacement, please call 1-800-606-8738 for authorization. Copyright NU-SET® 2008 Patented.